

Customer Instructions PopCorn Machine



Warning: To avoid serious burns, do NOT touch the kettle while it is hot! Do not let children operate the popcorn machine, and watch children around it.

Operating Instructions

1. There are 3 switches on the popper; KETTLE HEAT, KETTLE MOTOR & LIGHT & WARMER . The LIGHT & WARMER switch turns on the heat light. The KETTLE MOTOR switch turns on the motor which drives the kettle agitator. The KETTLE HEATER turns on the kettle heat.
2. Turn all 3 switches on, and preheat the machine for 5 minutes.
3. Pour pre-measured popcorn and oil pouch into the kettle.
4. When corn has popped, dump kettle
5. Repeat steps 3 & 4 for additional batches; always pop 3 - 5 batches for best popcorn.
6. Turn off kettle heat & kettle motor when not popping corn.
7. Return popcorn machine clean, and save cleaning charges!



Disclaimer:

These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.

A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •