



Customer Instructions Pretzel Warmer

Warnings: Machine must be properly grounded to prevent electrical shock to personnel. Do not immerse any part of this equipment in water. Always unplug the equipment before cleaning.

NOTICE: Machine must be returned clean or customer will be charged a cleaning fee. The Pretzel warmer does not cook the pretzels but simply keeps the pretzels from drying out for up to 8-10 hours.

Operating Instructions

1. Fill the inside pan with water to provide humidity inside the unit as needed.
2. Turn the heat switch to "ON" position.
3. Turn the heat control to 170° and allow to preheat for approximately a half hour.
4. Load thawed pretzels when preheat is complete.
5. Turn on light switch for light and rotating rack.
6. Once pretzels are heated thoroughly, it is recommended by the manufacturer to keep the food temperature at 150°.

Cleaning

Do not use any abrasives on the stainless steel body. Use a damp cloth to remove dirt and grease spots.

Controls and Their Functions

Light Switch

Flipping this switch to the "ON" position energizes the light and rotisserie motor. Note: the rotisserie will only function with the door closed. Do not manually turn the rotisserie with the doors open, this could damage the machine and you may be charged with damage fees.

Heat Switch

Flipping this switch to the "ON" position energizes the heat element. Note: the heat element is controlled by the heat control.

Heat Control

The control is graduated from "OFF" to 170° (High). The proper setting of this control will depend on the temperature of the items being placed inside and how many times the door is opened.



Disclaimer:

These instructions are intended as a helpful reminder. They do not replace the full operating instruction found in the owners manual, which is available at the rental counter

**A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !**

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •